


HC-7010 – 10 MOTOR MASSAGE

- A - Zone display: LED's show which zone is active
- B - Zone Keys: Press to select zone (area of body to massage)
- C - Program Indicator: LED's indicate which feature is being shown on Numeric Value Display (D)
- D - Numeric Value Display: Digital display shows the timer minutes, heat, intensity, speed levels indicated by Bar Graph
- E - Power On/Off: Press to turn on/off
- F - Heat Key: Press Heat to turn on/off
- G - Timer Key: Press repeatedly to cycle through timer settings
- H - Speed Key: Press + to increase massage pattern speed, press - to decrease massage pattern speed
- I - Intensity Keys: Press + to increase massage intensity, press - to decrease massage intensity

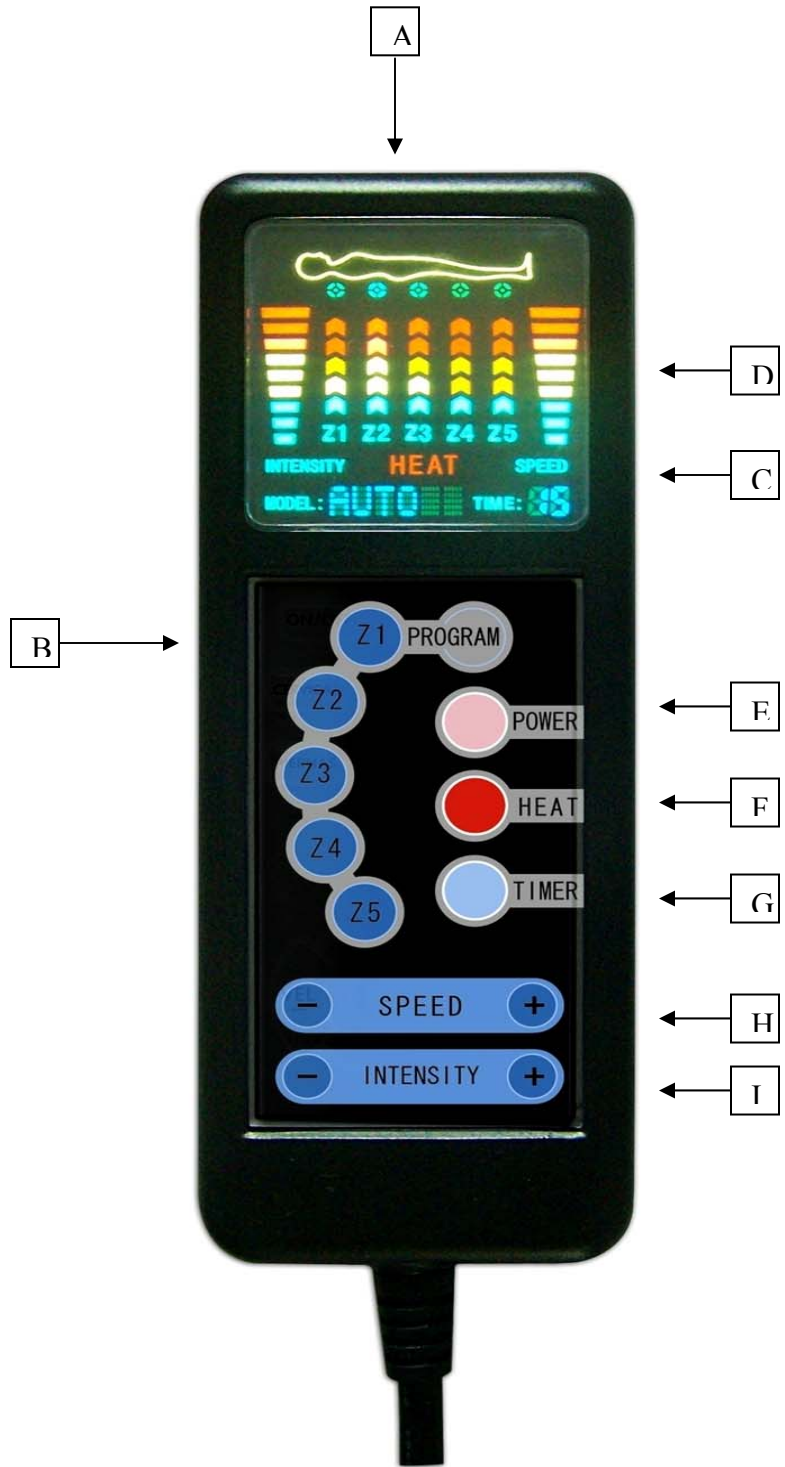

W7010 Operation Instruction

The 10-vibration-motor massage system with heat. When connected with 12VDC/1.5 Amp adapter, the LCD panel on the remote will light up and then shutoff within 15 seconds automatically. All massage functions need to be done by pressing the keys of the remote controller.

POWER Key: Massage power key. Press once and the system will start the auto massage mode, by pressing again the massage will be powered off.

HEAT Key: Heat Power Key. Press to turn heat on and off.

INTENSITY +/- Key: These two keys are for adjusting massage intensity. There are a total of four intensity settings, the default setting is set at level three (3). When adjusting the intensity, a LCD picture will light at the level it is set at.

SPEED +/- Key: These two keys are for adjusting massage speed. There are a total of four speeds, the default speed is set at level three (3). When adjusting the speed, a LCD picture will light at the level it is set at.

PROGRAM Key: There are a total of NINE (9) massage programs. By pressing the power key, the system will run an auto program. You may change the program by pressing the **Program** key. By pressing the program key repeatedly, it will cycle through the following programs:
AUTO→RUB→PULSE→WAVE→PRESS→TAP→ROTATE→PUSH→KNEAD。

Z1 Key: Used to control the massage in the neck area. Press to turn on and off.

Z2 Key: Used to control the massage in the middle back area. Press to turn on and off.

Z3 Key: Used to control the massage in the lumbar area. Press to turn on and off.

Z4 Key: Used to control the massage in the thigh area. Press to turn on and off.

Z5 Key: Used to control the massage in the calf area. Press to turn on and off.

TIMER Key: The default timer is 15 minutes. You may change the massage time by pressing this key. Each time pressed will change the timer in increments of 10 minutes with the maximum massage time of 60 minutes。